

VI.5.3D-SNOW PROGRAM FCST HCL TECHNIQUE SNOW

Purpose

Technique SNOW sets whether Operation SNOW-17 will be executed.

Valid values are NO (0) and YES (1).

The global default value is YES (1).

This Technique is Nonuniversal.

Form of Input

SNOW(integer)

where integer is 1 or 0 specifying whether or not to perform snow computations

Example

SNOW(0)

The snow Operation will not be executed for the entire run.

SNOW(0) (F SPRING)

The snow Operation will not be executed Forecast Group SPRING.